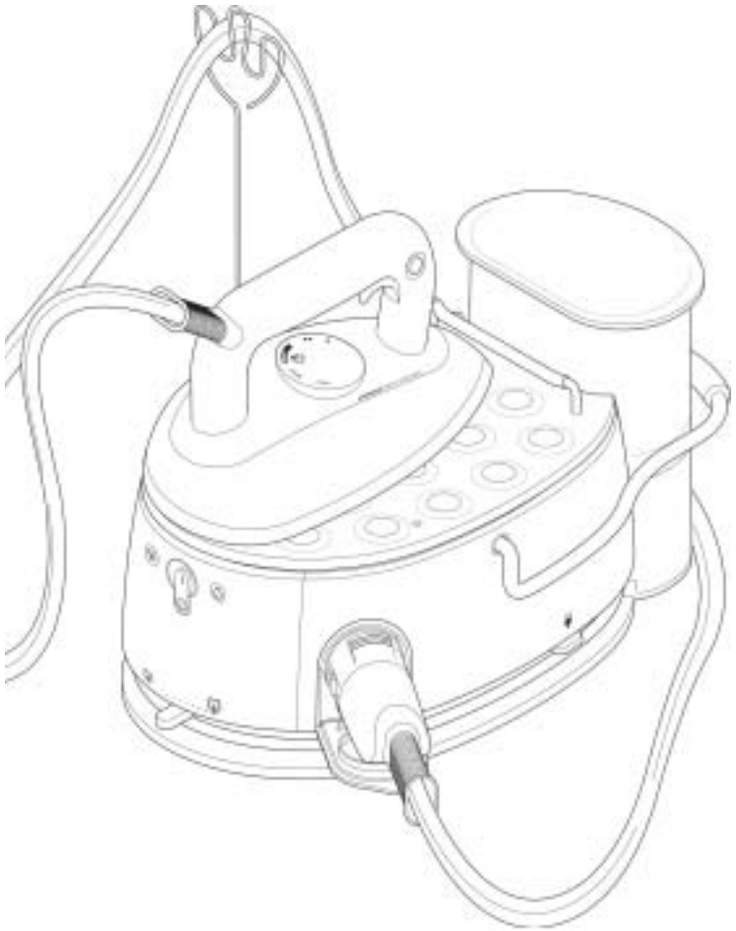

De'Longhi Australia Pty Limited
P.O.Box 597
Riverwood, NSW, 2208
AUSTRALIA

De'Longhi New Zealand Limited
P.O.Box 58-056
Greenmount, Auckland
NEW ZEALAND

56394/1

IC700 series

IC800 series

UNFOLD

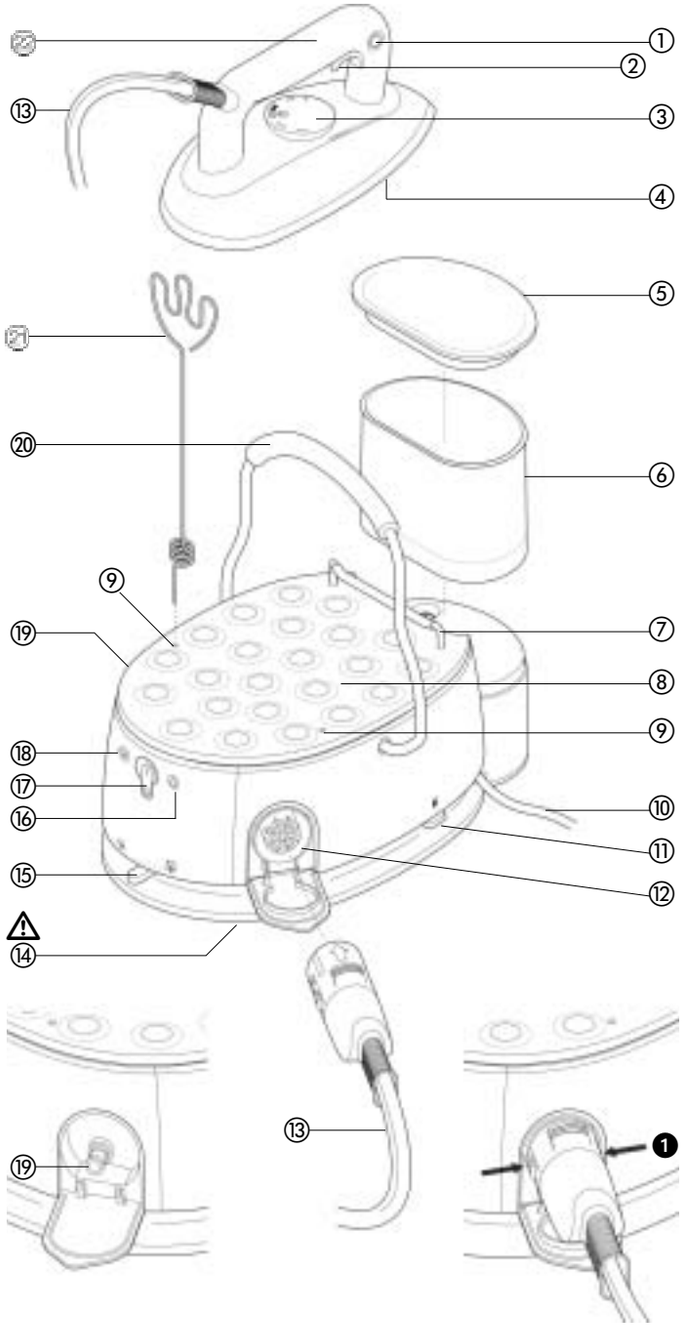

safety

⚠ When cleaning, never unscrew the boiler cap whilst the unit is pressurised. Steam will shoot out and burn you. Always switch off, unplug and leave overnight before commencing to clean the boiler.

- Don't get burnt by the iron's steam, hot water, soleplate or iron rest.
- Keep children away from the steam station. And make sure they can't grab the cords and pull the steam station down.
- Trailing cords are a hazard, keep them out of the way to prevent accidents.
- Never iron clothes being worn.
- Never put the steam station, cord or plug in liquid – you could get an electric shock.
- Always remove the water tank from the steam station when filling from a tap.
- Don't let the power and steam supply cords touch hot parts.
- Don't let infirm people use the steam station without supervision.
- During ironing pauses and after use always place the iron flat on the iron rest of the steam station.
- Never leave the steam station on unattended.
- Never use a damaged steam station. Get it checked or repaired: see 'service and customer care'.
- Only use this appliance for its intended domestic use.
- Don't let children play with the steam station.
- Don't touch the appliance with wet or damp hands.
- Always switch off and unplug the steam station before fitting or removing the detachable iron.
- Always unplug the steam station when not in use and allow to cool before moving or cleaning.
- It is extremely dangerous to direct the steam towards people or animals.
- Only use water with this appliance.
- During use, the steam station must be stable and used in a horizontal position.
- Never attempt to attach any unauthorised accessories to the steam station. Outlet 19 should only be used with the Delonghi Multicare accessory kit.
- Never let the iron touch or rest against the water tank.

before plugging in

Make sure your electricity supply is the same as the one shown on the underside of the steam station.

before using for the first time

1 Remove all packaging and any stickers or labels.
2 Wind excess cord around the base of the steam station.
3 Test the iron on an old cloth to make sure the soleplate and water tank are clean. We recommend that you allow steam to disperse by pressing the steam button in order to release any residues that may have built up during the manufacturing process.

- Repeat step 3 after prolonged periods of storage.

know your De'Longhi steam station

① lock for continuous steam
② steam button
③ temperature control with indicator light
④ soleplate
⑤ water tank cover
⑥ water tank
⑦ water tank guard rail
⑧ iron rest
⑨ cord cactus locations
⑩ power supply cord
⑪ cord storage
⑫ outlet for detachable iron
⑬ steam supply cord
⑭ boiler cap
⑮ variable steam control
⑯ low water indicator light
⑰ on/off button
⑱ ready to steam indicator light
⑲ outlet for Multicare accessory kit*
⑳ carry handle
cord cactus
detachable iron
PTFE soleplate not illustrated (model IC800 series only)

* The Multicare accessory kit model ICK01 and the PTFE soleplate model ICSP01 are not included with model IC700, but it may be able to be purchased separately by contacting the shop where you purchased the steam station or by visiting www.delonghi.com.au

using your steam station

1 Fit the detachable iron into it's socket: Lower the outlet cover, then with the arrow on the connector uppermost, push into the socket until fully home. To remove, squeeze the ribs on either side of the connector and pull out ❶. Never remove the iron by pulling on the cord.
2 Place the steam station on the support of the ironing board or any other stable surface nearby with the iron sitting on the iron rest. Make sure the steam station is unplugged and that the power and steam supply cords are unrolled and not kinked.
3 Fit the cord cactus into one of the cord cactus locations. Place the steam supply cord into one of the grooves on the other end of the cord cactus. This will keep the cord in an upright position.

filling with water

Either
1 Lift off the water tank cover and fill with water. Replace the cover.
Or
2 Remove the tank by lifting off. Lift off the cover, then fill the tank under the tap. Re-fit the cover. Replace the tank into its original position by gently pushing into place.

- Filtered water is best as it reduces limescale, prolonging the life of your steam station (water filters are widely available). Alternatively use tap water.
- If you need to refill your steam station during use, we recommend the empty water tank is removed for filling. If filled whilst fitted, always unplug the steam station first.

choosing the right temperature

Follow the clothes label advice. Match the dots on the label to the dots on the temperature control. If there's no label, here's a guide on which temperature to choose:

hints

- Start on clothes needing the lowest temperature, then work upwards. (This lowers the risk of burning something because an iron switched from 'hot' to 'cool' takes time to cool down.)
- For mixed fibres, eg cotton ●●● and polyester ●, use the lowest suitable temperature ●.
- If in doubt, start with a low temperature on a part that won't be seen (eg a shirt tail).

setting the temperature

Before switching on the steam station, make sure that the lock for continuous steam is in the off position by firmly pressing the lock on the left hand side of the iron. This will ensure that the steam button is released.

1 Plug the steam station into the power supply.
2 Switch on, the blue light will glow.
3 Turn the temperature control to the temperature you want, the light under the control will glow. When the iron reaches the set temperature, the light will go out. (During ironing, this light will go on and off as your iron maintains the right temperature.)

dry ironing

Follow the procedure above for setting the temperature.
Care should be taken not to press the steam button.

steam ironing

1 Make sure there is water in the tank. Plug into the power supply and switch on.
2 Turn the temperature control to the desired setting. For best results when steaming we recommend that the temperature control should be set to .
3 Wait until the green ready to steam light glows indicating that the correct pressure has been reached. This takes about 3 minutes.
- During use you may hear a slight humming coming from the iron. This means that the pump is operating and passing water from the tank to the boiler where the steam is generated for ironing. This will be accompanied by the red low water indicator light glowing.

4 Before starting to iron press the steam button several times, this will release any condensation droplets. Each time the steam will be forced through the openings on the iron soleplate.
5 To produce steam whilst ironing clothes press the steam button. For continuous steam, press the steam button and then press the lock for continuous steam on the right hand side of the iron. To stop continuous steam, press the button on the left hand side.
When using the steam function, the green ready to steam indicator light will go off.
- It is possible to vary the amount of steam produced. Move the variable steam control to the right for maximum steam and to the left for minimum steam.

6 The red low water indicator light will glow continuously when the water tank becomes empty. This will be accompanied by a continuous humming noise of the pump. Should this occur we recommend you switch off the steam station. Remove the water tank and refill.
Note: For prolonged use always ensure there is water in the water tank.

hints

- Wool and velvet. Guide the iron 2 cm above the fabric, depressing the steam button. The power of steam smoothes away creases and revitalises the fabric. Do not pull the fabric.
- Vertical ironing – suits, dresses and curtains are smoothed, renewed and put into shape again while they are hanging (see below).

PTFE soleplate (model IC800 only)

The Multicare accessory kit model ICK01 and the PTFE soleplate model ICSP01 are not included with model IC700, but it may be able to be purchased separately by contacting the shop where you purchased the steam station or by visiting www.delonghi.com.au

steaming the creases out of curtains, hanging clothes, wall hangings

1 Make sure there is water in the tank.
2 Turn the temperature control to .
3 When the green ready to steam light glows pull the material slightly with one hand: hold the iron upright with the other.
4 Tilt the iron forwards, then move it down the material, pressing the steam button.
- Never steam clothes being worn. Keep your hands away from the steam and soleplate.
- Always ensure that the iron is facing away from the user and/or others when vertical steaming.
- For material other than linen or cotton, keep the iron off the material to avoid burning it.

care and cleaning

- Always switch off, unplug and allow to cool overnight before cleaning or storing.
- Empty the water tank.
- When carrying the unit, always use the carry handle and make sure the iron is secure before moving.

the outside soleplate

- Don't scratch the outside by ironing anything hard eg zips.
- To remove minor remains of material stuck to the soleplate, rub lengthways with a soft, damp, non-metallic cleaning pad.

casing

- Wipe with a damp cloth.

the inside

- Every 2 to 3 months clean the boiler making sure it has been allowed to cool overnight first. Turn the steam station upside down and pull back the flap covering the boiler cap ❷.

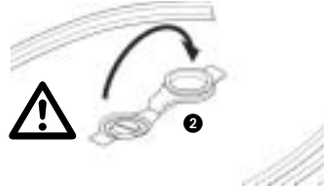

Unscrew the boiler cap using a coin and empty out any water. Add one cup of tap or filtered water and shake the appliance then empty out all the water. Repeat this operation until the water from the boiler comes out clear and clean.
When cleaning is finished pour 500ml fresh tap or filtered water into the boiler and screw the boiler cap back on again without using excessive force. Replace the cover. The unit is now ready to use.

- Never use any chemical descaling agents or vinegar as these may damage your steam station.
important: Aways add 500ml water direct to the boiler after cleaning to prevent damaging the steam station.

service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by De'Longhi or an authorized De'Longhi service representative during the warranty period
- In the unlikely event of a breakdown, you will have access to professional help from De'Longhi by simply calling this number:

Australia: 1 800 126 659

New Zealand: 0508 200 300

- We undertake to repair or replace this product, at our option, at no charge, if found to be defective due to a manufacturing fault during the warranty period. This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, no fault found with the product or work carried out by anyone other than an authorised De'Longhi Service Representative.

Warranty Periods
Housewares

* 1 year full warranty